

**SELLEYS®**

# POINT WORKS®

## GEN II

**Adhesive Mechanical  
Fastener Flexible Pointing**

**For hip and ridge tiles**

- ▶ First to pass AS4046.8-2006 using C4 wind load pressure sequences
- ▶ Correctly installed, removes the need for fastening clips on hip and ridge tiles as required by AS2050 (2005\*)
- ▶ Revolutionary Point Works® Gen II Sprays, put you in control



\* Mechanical fastening as defined in AS2050-2002 Clauses 2.4.1 and 2.4.2

**SELLEYS®**  
IF IT'S SELLEYS IT WORKS™


## COLOUR CHART

\*Colours only approximation

Jet Black PW007	Dark Grey PW006	Grey PW005
Mid Grey PW020	Kava PW048	Fig PW049
Truffle PW030	Walnut PW043	Cocoa PW016
Coffee PW033	Bone PW035	Oatmeal PW041
Neutral PW001	Butterscotch PW050	Burnt Orange PW008
Outback Red PW031	Salsa PW022	Terracotta PW011
Desert Red PW010	Crimson PW004	Mahogany PW037
Jungle Green PW038	Fudge PW052	Savanna PW044
Rainforest PW045	Peppercorn PW021	


▶ **ACCELERANT SPRAY:**  
to speed up drying  
in cold and wet conditions

▶ **RETARDANT SPRAY:**  
to extend working time  
in hot windy conditions

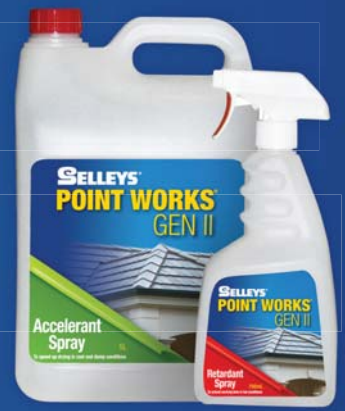

## APPLICATION INSTRUCTIONS

1. Install ridge tiles in accordance with AS2050 using a bedding mix of 4 to 1 ratio (sand to cement). After the bedding has firmed, using a suitable tool (eg screw head), undercut the bedding below the bottom edge of the ridge tile as per the diagram shown here.
2. Ensure that the edges of the ridge tile and the roof tile surface next to the bedding are brushed completely free of powdery bedding mortar.
3. Trowel SELLEYS POINT WORKS GEN II to a thickness of 3 to 5 mm, ensuring that pointing has full contact with and under the edge of the ridge tile. Trowel in small runs to ensure a neat clean finish. Regularly mix the product in the bucket to avoid skinning.
4. Finish SELLEYS POINT WORKS GEN II to a smooth surface with a wet trowel. Regularly clean trowel with water to ensure a smooth finish. In hot weather SELLEYS POINT WORKS GEN II RETARDANT SPRAY may be used to slow down skinning of the product surface and to aid trowelling. Do not sponge or brush SELLEYS POINT WORKS GEN II as this will damage the finished appearance. Sweep down each hip and ridge as pointing is complete to prevent excess product adhering to tiles.
5. Weepholes must be installed in ridges and may be put in as you go or on completion of the job.

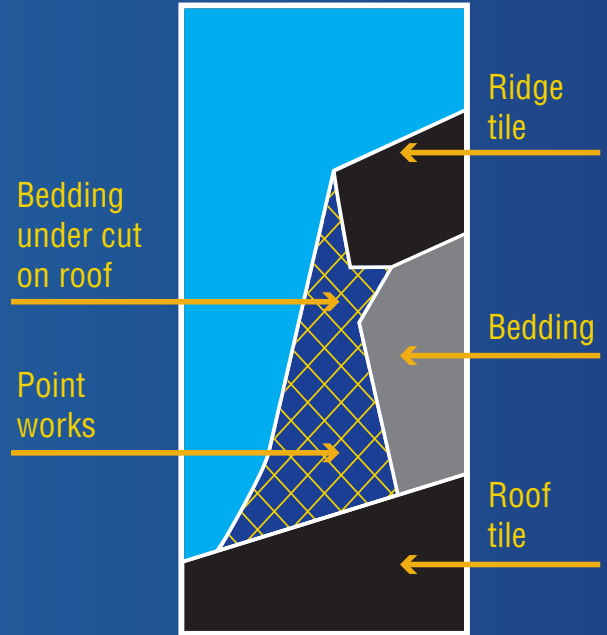

## COVERAGE

One 10 litre bucket of SELLEYS POINT WORKS GEN II covers approximately 22 metres of ridging.

## OPEN TIME

10 to 20 minutes at 40°C before product starts to skin. This will vary depending on environmental conditions.

For more information and application advice see the Technical Data Sheet or contact Selley's Technical Enquiries

**1300 555 205** (Australia)

**0800 735 539** (New Zealand)

MADE IN AUSTRALIA Selley's, 1 Gow Street, Padstow, NSW 2211 Selley's New Zealand, The Gate, 373 Neilson St, Onehunga, Auckland, New Zealand. Selley's and Point Works are registered trade marks. If It's Selley's It Works is a trade mark.

**SELLEYS**  
IF IT'S SELLEYS IT WORKS™